说明书归档首页

说 明 书 编号:	M0	0309Q	0309Q			本号:	V02				
姍 勺:			适用产	日序列							
	□ 全新编制		适用机								
			衍生产!			Λ\/D ()	7~5/	HCFCH,AV	'D 07~5	AHCECI	
	- AC I	나 내 표비	衍生机			AVD-0	17 34	псгсп,А	D-07 3	4HCFCL	
	■ 17丁生	生机型	源产品	1137	220/1/	2050	/C2EZDD 11	VD 220	4.005/035	700	
编制说			源机型系列: 源说明书编号:		HV	R-22°10	our G	/G2FZBP,H 版本号		160F/G2F	ZBF
明			源 见 明	节绷 写:					ī:		
(首版编 制时请填	□临	时对应	对应简单	要说明:							
写)			源说明	书编号:				版本号	글:		
	签字区	•	签名		1			 ∃期			
	设计:		潘翠泽	<u> </u>			2	.019-7-29			
	审核:		宋振》					2019-7-29			
	标准化	. •	陶友浴					2019-7-30			
	批准:		宋振				2019-7-30				
	标记	管理编	1	<u>日期:</u>		更改:	f	 审核 :	批准		
	^		1909-221 2019-10-		- 1	潘翠连		<u>米丽娜</u>		E: 振兴	
亦田屋	DE/TO		1912-241		1	田十八	- '	7 (414) / (4	7104)/K/ \	
変更履 历	<u></u>						+				
(変更说	<u>A</u> ×						+				
明书时请	∆±X ∆5X										
填写)							+				
× •/	<u>6</u> ×										
	Δ×										
	本重力		出法				_	ME 7	3.高加		
	变更内容简要描述 38-54机组气管管径错误从19.05更改为15.88								及页码 ⁹ 11		
									<u></u> 広		
	封底版本号更改为V02							<u>+</u> ,	1760		
1.37.											
本次变											
更											
内容简											
述											
	担当联约	络方式	808794	.57	郎	箱	p	ancuilian@	hisens	sehitachi.	com
备注	说明书	封面材质	100g双	胶纸 说明	目书内	内页材质	5 7	70g双胶纸			
(必填)	说明书图	图幅	A5	是	否彩色印刷						

Hisense

Operation Installation & Maintenance Manual


INVERTER-DRIVEN MULTI-SPLIT AIR-CONDITIONER (HEAT PUMP)

- INDOOR UNIT -

Туре	N	lodel
CEILING DUCTED TYPE	AVD-07HCFCH(L) AVD-09HCFCH(L) AVD-12HCFCH(L) AVD-15HCFCH(L) AVD-19HCFCH(L) AVD-22HCFCH(L) AVD-24HCFCH(L) AVD-27HCFCH(L)	AVD-30HCFCH(L) AVD-38HCFCH(L) AVD-48HCFCH(L) AVD-54HCFCH(L)



READ AND UNDERSTAND THIS MANUAL BEFORE USING THIS HEAT-PUMP AIR CONDITIONERS. KEEP THIS MANUAL FOR FUTURE REFERENCE.

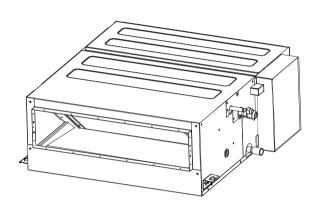

M00309Q

ORIGINAL INSTRUCTIONS



Declaration of Conformity (Manufacturer's Declaration)



Qinadao Hisense Hitachi Air-conditioning Systems Co., Ltd. 218, Qianwangang Road, Economic & Technical Development Zone, Qingdao, P.R. China declares under its sole responsibility that the air conditioning models to which this declaration relates:

AVD-07HCFCH(L),AVD-09HCFCH(L),AVD-12HCFCH(L),AVD-15HCFCH(L),AVD-19HCFCH(L), AVD-22HCFCH(L),AVD-24HCFCH(L),AVD-27HCFCH(L)

are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:

> EN 60335-1 EN 60335-2-40 EN 62233 EN 55014-1 EN 61000-3-2 EN 61000-3-3 EN 55014-2

following the provisions of: 2006/42/EC

2014/30/EU 2012/19/EU 2011/65/EU 2014/35/EU 2006/1907/EC

Directives, as amended.

Manufacturing number and manufacturing year: refer to model Nameplate. Notes:

This declaration becomes invalid, if technical or operational modifications are introduced without the manufacturers consent.

Hisense Italia S.r.I. is authorised to Compile the Technical Construction File. Ad.: Via Montefeltro 6A, 20156 Milano.

Hisense

Name, Surname : Sun Long

Position/ Title : Director

: September 15, 2019 Date

IMPORTANT NOTICE

- Hisense pursues a policy of continuing improvement in design and performance of products. The right is therefore reserved to vary specifications without notice.
- Hisense cannot anticipate every possible circumstance that might involve a potential hazard.
- This heat pump air conditioner is designed for standard air conditioning only. Do not use this heat pump air conditioner for other purposes such as drying clothes, refrigerating foods or for any other cooling or heating process.
- The installer and system specialist shall secure safety against leakage according to local regulations or standards. The following standards may be applicable if local regulations are not available. British Standard, BS4434 or Japan Standard, KHKS0010.
- No part of this manual may be reproduced without written permission.

Signal words (DANGER, WARNING and CAUTION) are used to identify levels of hazard seriousness.
 Definitions for identifying hazard levels are provided below with their respective signal words.

A DANGER

Immediate hazards which WILL result in severe personal injury or death.

AWARNING

Hazards or unsafe practices which COULD result in severe personal injury or death.

ACAUTION

Hazards or unsafe practices which COULD result in minor personal injury or product or property damage.

NOTE : Useful information for operation and/or maintenance.

- It is assumed that this heat pump air conditioner will be operated and serviced by English speaking people. If this is not the case, the customer should add safety, caution and operating signs in the native language.
- If you have any questions, contact your distributor or dealer of Hisense
- This manual gives a common description and information for this heat pump air conditioner which you
 operate as well as for other models.
- This heat pump air conditioner has been designed for the following temperatures. Operate the heat pump air conditioner within this range.

Temperature (°C)

		Maximum	Minimum
Cooling Operation	Indoor	32 DB / 23 WB	21 DB / 15 WB
Cooling Operation	Outdoor*	43 DB	-5 DB
Heating Operation	Indoor	27 DB	15 DB
Heating Operation	Outdoor*	15WB	-20 DB

DB: Dry Bulb, WB: Wet Bulb

This manual should be considered as a permanent part of the air conditioning equipment and should remain with the air conditioning equipment.

^{*}Refer to the Outdoor Unit Manual for details of operation limitations.

<u>IMPORTANT NOTICE</u>



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

CHECKING PRODUCT RECEIVED

- Upon receiving this product, inspect it for any shipping damage.
 Claims for damage, either apparent or concealed, should be filed immediately with the shipping company.
- Check the model number, electrical characteristics (power supply, voltage and frequency) and accessories to determine if they are correct.

The standard utilization of the unit shall be explained in these instructions.

Therefore, the utilization of the unit other than those indicated in these instructions is not recommended. Please contact your local agent, as the occasion arises.

Hisense's liability shall not cover defects arising from the alteration performed by a customer without Hisense's consent in a written form.

TABLE OF CONTENTS

Section1 Operation Manual

1.	Safety Summary	1
2.	System Description	1
3.	Remote Control Switch	2
4.	Before Operation	3
5.	Operation Method	. 3
6.	Automatic Control	3
7.	Troubleshooting	4
	7.1 If Trouble Still Remains	4
	7.2 No Operation	4
	7.3 Not Cooling or Heating Well	4
	7.4 This is Not Abnormal	4
8.	Filter Cleaning	- 5
	8.1 Taking Out the Filter ·····	- 5
	8.2 Clean the Filter	5
	8.3 Installation the Filter	5
	8.4 Reset of Filter Indication	5
S	ection2 Installation & Maintenance Manual	
1	Safety Summary	6
	. Structure ·····	
_		
	2.1 Indoor Unit & Refrigerant Cycle	
	2.2 Necessary Tools and Instrument List for Installation	
3	. Transportation and Handling ······	
	3.1 Transportation ·····	6
	3.2 Handling of Indoor Unit	6
2	. Indoor Unit Installation ·····	7
	4.1 Factory-Supplied Accessories	7
	4.2 Initial Check ·····	8
	4.3 Installation ·····	8

5	. Refrigerant Piping Work	11
	5.1 Piping Materials ·····	11
	5.2 Piping Connection ·····	11
6	. Drain Piping ·····	12
7.	Electrical Wiring·····	13
	7.1 General Check ······	13
	7.2 Electrical Wiring Connection	13
	7.3 Static Pressure Electrical Wiring Connection	14
8.	Test Run ·····	14
9.	Safety and Control Device Setting	15
10.	Common	15
	10.1 Field Minimum Wire Size for Power Source Line	15
	10.2 Setting of DIP Switch	16

Section 1 Operation Manual

1. Safety Summary

🛕 DANGER

- Do not pour water into the indoor or outdoor unit. These products are equipped with electrical parts. If poured, it will cause a serious electrical shock.
- Do not touch or adjust safety devices inside the indoor or outdoor units. If these devices are touched or readjusted, it may cause a serious accident.
- Do not open the service cover or access the indoor or outdoor units without turning OFF the main power supply.

AWARNING

- Refrigerant leakage can cause difficulty with breathing due to insufficient air.
 If leakage occurs, turn OFF the main switch, put out fire at once and contact your service contractor.
- Do not use any sprays such as insecticide, lacquer, hair spray or other flammable gases within approximately one (1) meter from the system.
- If earth leakage breaker (ELB) or fuse is often activated, stop the system and contact your service contractor.

ACAUTION

- The appliance is not to be used by children or person with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised that they do not play with the appliance.
- The appliance should not be installed in the laundry.

NOTE

 It is recommended that the room be ventilated every 3 to 4 hours.

2. System Description

A maximum total capacity of 130% and a minimum total capacity of 50% can be chosen by combination of the indoor units (Table 2.1).

The heat pump air conditioner is designed to offer cooling, heating, dry and fan operations.

These operation modes are controlled by the remote control switch (optional).

Table 2.1 Indoor Unit Type List

Indoor Unit Type		Nominal Capacity (10³ Btu/h)								
CEILING	07	09	12	15	19	22	24	27	30	38
DUCTED	0	0	0	0	0	0	0	0	0	0
	48	54								
TYPE	0	0								

O: Available

3. Remote Control Switch

ACAUTION

Press switches only with fingers. Do not press switches by any other item, as it may break switches.

Do not touch the CHECK switch. This switch is only for servicing. If touched, press the CHECK switch again to reset.

● Temperature Setting

When the TEMP switch is pressed, temperature increases by 1 degree. The minimum setting indication is 16 °C and the maximum setting indication is 32 °C.

Set and Actual Temperature

The set temperature is for the air temperature at the sensor (thermistor) of the indoor unit. The actual room temperature may be different

from the air temperature of the sensor due to the difference of the sensing location.

Touching Type Switches

This control switch is of touching type. Slightly press the switch by finger. The operation can be checked by the display of the liquid crystal.

Multiple-Unit Control

16 indoor units, as a maximum number, can be controlled by one remote control switch.

Refer to the Installation Manual for Remote Control Switch.

4. Before Operation

ACAUTION

Supply electrical power to the system for approximately 12 hours before start-up after long shutdown. Do not start the system immediately after power supply, it may cause a compressor failure, because the compressor is not heated well.

Make sure that the outdoor unit is not covered with snow or ice. If covered, remove it by using hot water (approximately 50°C). If the water temperature is higher than 50°C, it will cause damage to plastic parts.

When the system is started after a shutdown longer than approximately 3 months, it is recommended that the system be checked by your service contractor.

Turn OFF the main switch when the system is stopped for a long period of time. If the main switch is not turned OFF, electricity is consumed, because the oil heater is always energized during compressor stopping.

5. Operation Method

Regarding the instructions of Wired Remote Control Switch or Wireless Remote Control Switch, read the operation manual attached to the control switch.

6. Automatic Control

The system is equipped with the following functions.

NOTE

Except for a long period of shutdown, keep the main power switch ON. The drain discharge mechanism is operated if the drain level is higher than the setting.

- Three Minute Guard (Enforced Stoppage)
 The compressor remains off for at least 3
 minutes once it has stopped. If the system is
 started within approximately 3 minutes after it
 has stopped, the RUN indicator is activated.
 However, the cooling operation or the heating
 operation remains off and does not start until
 after 3 minutes has elapsed.
- Three Minute Guard (Enforced Operation)
 If all indoor units of the system are ThermoOFF within approximately 3 minutes after
 compressor has started, compressor is
 operated during 3 minutes continuously.
 However, if all indoor units of the system are
 stopped by remote control switch, compressor
 is stopped.

Oil Return Operation

If an indoor unit is stopped more than 2 hours continuously, this function is operated during a few minutes.

It has this function to prevent to accumulate in the heat exchanger of stoppage indoor unit at cooling operation.

- Frost Prevention During Cooling Operation
 When the indoor unit is operated at low
 discharge air temperature, the cooling
 operation may be changed to fan operation for
 a while to avoid frost formation on the indoor
 heat exchanger.
- Hot Start During Heating Operation
 To prevent cold air discharge in the room, the
 fan speed is controlled from the slow position
 and the low position and then to the set position
 according to the discharge air temperature.

Slow Air Control During Defrosting Operation

When the outdoor unit is performing the automatic defrosting operation, the indoor fan is stopped.

Cooling of Indoor Unit

When the heating operation is stopped, the indoor fan operation is maintained at the slow position for the maximum of 2 minutes to lower temperature of the inside unit.

Automatic Defrosting Cycle

When the heating operation is stopped by pressing RUN/STOP switch, frosting on the outdoor unit is checked and the defrosting operation may be performed for the maximum of 10 minutes.

Prevention of Overload Operation

When the outdoor temperature is high during heating operation, heating operation is stopped due to activation of the outdoor thermistor until the temperature becomes low.

NOTE

If the system is stopped due to a power failure, it will not automatically start again although power is restored.

Repeat the start-up procedure from Step 1 to start the system. In the event of a very brief power failure (2 seconds maximum), the settings are memorized.

Therefore, the system starts automatically after approximately 3 minutes.

7. Troubleshooting

ACAUTION

When overflow of drain water from the indoor unit occurs, stop the operation and contact your contractor.

When you smell or see white smoke coming from the unit, turn OFF the main power supply and contact your contractor.

7.1 If Trouble Still Remains

If the trouble still remains even after checking the following, contact your contractor and inform them of the following items.

- (1) Unit Model Name
- (2) Content of Trouble
- (3) Alarm Code No. on Liquid Crystal Display

7.2 No Operation

Check whether the SET TEMP is set at the correct temperature.

7.3 Not Cooling or Heating Well

- Check for obstruction of air flow of the outside or inside units.
- Check if too much heat source exists in the room.
- Check if the air filter is clogged with dust.
- Check to see if the doors or windows are opened or not.
- Check if the temperature condition is not within the operation range.

7.4 This is Not Abnormal

Smells from Indoor Unit

Smell adheres on indoor unit after a long period of time. Clean the air filter and panels or allow a good ventilation.

Sound from Deforming Parts

During system starting or stopping, an abrading sound might be heard. However, this is due to thermal deformation of plastic parts. It is not abnormal.

Steam from Outdoor Heat Exchanger
 During defrosting operation, ice on the outdoor heat exchanger is melted, resulting in making steam.

Dew on Air Panel

When the cooling operation continues for a long period of time under high humidity conditions (higher than 27°C/80% R.H.), dew can form on the air panel.

Refrigerant Flow Sound

While the system is being started or stopped, sound from the refrigerant flow may be heard.

NOTE

Except for a long period of shutdown, keep the main switch ON, since the oil heater is energized when the compressor is stopping.

8. Filter Cleaning

Turn OFF the main power switch before taking out the filter. (The previous operation mode may appear.)


8.1 Taking Out the Filter

The indication, "FILTER" is shown on the display of the remote control switch after approximately 1,200 hour operation.

Take out the air filter according to the following steps.


Step1

Remove two screws from the small plate next to the electric box.

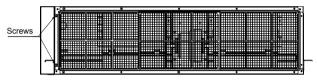


Step 2

Take out the small plate from the indoor unit.

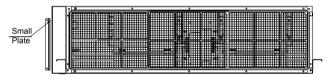

Step3

Take out the air filter from the air inlet grille. Slots are reserved for the tools in the front of the air filter. Air filter can be folded for multistage filters.

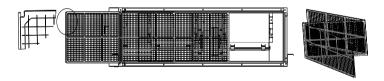

8.2 Clean the Filter

Clean the air filter according to the following steps.

Step 1

Use a vacuum cleaner or let water flow onto the air filter for removing the dirt from the air filter.

ACAUTION


Do not use hot water higher than approximately 40°C.

Step 2

Dry the air filter in the shade after shaking off moisture.

8.3 Installation the Filter

The installation method is contrary to the disassembly method.But Install air filter according to arrow direction.

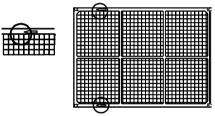

8.4 Reset of Filter Indication

After cleaning the air filter, press the "FILTER" button. The FILTER indication will disappear and the next filter cleaning time will be set.

Section 2 Installation & Maintenance Manual

1. Safety Summary

AWARNING

- Do not perform installation work, refrigerant piping work, drain piping and electrical wiring connection without referring to the installation manual.
- Check that the ground wire is securely connected.
- Connect a fuse of specified capacity.
- Pay a special attention to the place, such as a basement, etc. where refrigerant can stay, since refrigerant is heavier than air.

ACAUTION

Do not install the indoor unit, outdoor unit, remote control switch and cable within approximately 3 meters from strong electromagnetic wave radiators such as medical equipment.

2. Structure

2.1 Indoor Unit & Refrigerant Cycle

Regarding the structural drawings and the refrigerant cycle diagrams, refer to Technical Catalogue .

2.2 Necessary Tools and Instrument List for Installation

No.	Tool	No.	Tool
1	Handsaw	11	Spanner
2	Phillips Screwdriver	12	Charging Cylinder
3	Vacuum Pump	13	Gauge Manifold
4	Refrigerant Gas Hose	14	Cutter for Wires
5	Megohmmeter	15	Gas Leak Detector
6	Copper Pipe Bender	16	Leveller
7	Manual Water Pump	17	Clamper for Solderless Terminals
8	Pipe Cutter	18	Hoist (for Indoor Unit)
9	Brazing Kit	19	Ammeter
10	Hexagon Wrench	20	Voltage Meter

NOTE

About vacuum pump, gas hose, charging cylinder, gauge manifold, please use suitable equipments for R410A respectively. Do not mix other refrigerant.

3. Transportation and Handling

3.1 Transportation

Transport the product as close to the installation location as practical before unpacking.

ACAUTION

Do not put any material on the product.

3.2 Handling of Indoor Unit

A WARNING

Do not put any foreign material into the indoor unit and check to ensure that none exists in the indoor unit before the installation and test run. Otherwise, a fire or failure, etc. may occur.

ACAUTION

Be careful not to damage on insulation materials of unitis surface when lifting.

4. Indoor Unit Installation

ADANGER

Do not install the indoor unit in a flammable environment to avoid fire or an explosion.

AWARNING

- Check to ensure that the ceiling slab is strong enough. If not strong enough, the indoor unit may fall down on you.
- Do not install the indoor unit outdoors. If installed outdoors, an electric hazard or electric leakage will occur.

It is recommended that indoor units be installated higher than 2.5 meters from the floor level.

4.1 Factory-Supplied Accessories

Check to ensure that the following accessories are packed with the indoor unit.

NOTE

If any of these accessories are not packed with the unit, please contact your contractor.

Table 4.1 Factory-Supplied Accessories

Accessory	Q'ty	Purpose
Washer	8	For Unit Suspension
Screw	16	For Fixing Flanges
Hose Clamp) 1	For Drain Hose Connection
Accessory Bag for Magnetic Ring] 1	Arranged around the Power Cord of Outdoor Unit

4.2 Initial Check

 Install the indoor unit with a proper clearance around it for operation and maintenance working space, as shown in Fig. 4.1.

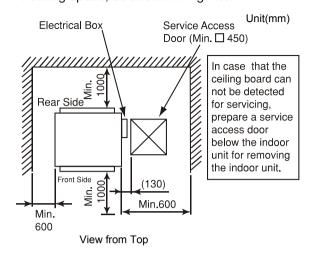


Fig. 4.1 Operation and Installation Space

- Consider the air distribution from the indoor unit to the space of the room, and select a suitable location so that uniform air temperature in the room can be obtained.
- Do not install flammable parts in the service space for the indoor unit.
- Avoid obstacles which may hamper the air intake or the air discharge flow.
- Do not install the indoor unit in a machine shop or kitchen where vapor from oil or its mist flows to the indoor unit.

The oil will deposit on the heat exchanger, thereby reducing the indoor unit performance, and may deform and in the worst case, break the plastic parts of the indoor unit.

- Pay attention to the following points when the indoor unit is installed in a hospital or other facilities where there are electronic waves from medical equipment.
 - (A) Do not install the indoor unit where the electromagnetic wave is directly radiated to the electrical box, remote control cable or remote control switch.
 - (B) Install the indoor unit and components as far as practical or at least 3 meters from the electromagnetic wave radiator.
 - (C) Prepare a steel box and install the remote control switch in it. Prepare a steel conduit tube and wire the remote control cable in it. Then, connect the ground wire with the box and the tube.

- (D) Install a noise filter when the power supply emits harmful noises.
- To avoid any corrosive action to the heat exchangers, do not install the indoor unit in an acid or alkaline environment.

AWARNING

Check to ensure that the number of below is within 0.3kg/m³. Otherwise it may cause danger situation if the refrigerant in the Outdoor Unit leaks into the room where this Indoor Unit is installed.

In detail, refer to the Installation Manual for outdoor unit.

4.3 Installation

4.3.1 Suspension Bolts

Step 1


Select final location and installation direction of the indoor unit paying careful attention to the space for the piping, wiring and maintenance.

Step 2

· For Concrete Slab

Mount suspension bolts, as shown in Fig. 4.2

Mount suspension boits, as shown in Fig. 4.2

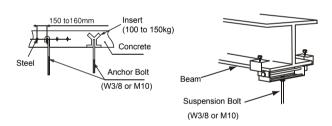


• For Wooden Beam Suspension

(60mm to 90mm Square)

Wooden Bar


Wooden Beam

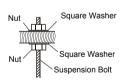

· For Steel Beam

Fig. 4.2 Mounting of Suspension Bolts

- 4.3.2 Marking of the Positions of the Sling Bolts and Piping Connections
- (1) Mark the positions of the sling bolts, refrigerant piping connections and drain connection.
- (2) Installation dimensions are shown in Fig4.3.

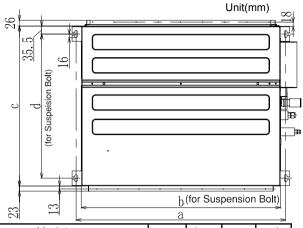

Model	а	b	С	d
07 ~ 15	700	650	720	650
19 ~ 24	946	900	720	650
27 ~ 38	1150	1100	800	727
48 ~ 54	1450	1400	800	727

Fig. 4.3 Suspension Bolts

4.3.3 Mounting the Indoor Unit Hang the indoor unit as shown in Fig. 4.4.

Field-Supplied Parts

*Sling Bolts 4-M10 or W3/8
*Nut 8-M10 or W3/8

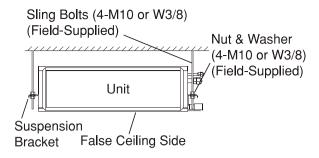


Fig. 4.4 Hanging Indoor Unit

How to put Nuts or Sling Bolts
 Put nuts on each of the four hanging bolts, as shown in Fig. 4.5.

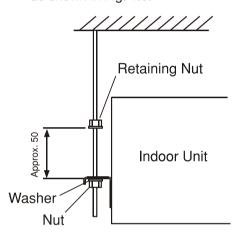


Fig. 4.5 Sling Bolts and Nut

- (2) Hanging the Indoor Unit
 - * Hook suspension bracket to the nut and washer of each hanging bolt, as shown, starting at the opposite side to service cover side.
 - * After checking that the nut and washer are correctly fixed by the retainers of the suspension bracket, hook the suspension bracket of the service cover side to the nut and washer.

(Put the sling bolts away from the unit when hooking.)

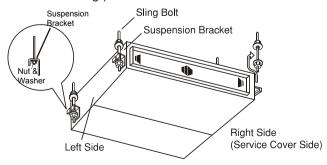


Fig. 4.6 Hanging Indoor Unit

4.3.4 Adjusting of the Unit Level

 Check to ensure that the foundation is flat, taking into account the maximum foundation gradient.

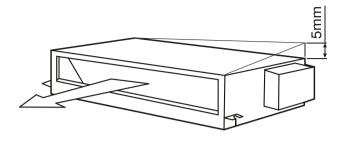


Fig. 4.7 Foundation Gradient

- (2) The unit should be installed so that the rear side of the unit is slightly (0mm~5mm) lower than the front side, in order to avoid the incorrect position of the drain discharge.
- (3) Tighten the bolts of the sling nuts with the suspension brackets after adjustment is completed.

Special plastic paint must be applied to the bolts in order to prevent them from loosening.

NOTE

Keep the unit as well as relevant equipment covered with the vinyl cover during installation work.


4.3.5 Connecting Supply Duct

- (1) The supply duct should be connected with the indoor unit through canvas ducts, in order to avoid abnormal sound vibration (Refer to Fig. 4.8). The unit is equipped with a pre-drilled duct flange for the supply duct connection.
- (2) Attach the vibration proof rubber to Sling Bolt in order to avoid abnormal sound vibration.
- (3) Duct material should be non-flammable material.
- (4) Perform the heat insulation work over the duct for dew protection.

ACAUTION

- If a lower sound level is further required, install silencer (field-supplied).
- Design duct arrangement as "Unit External Static Pressure=Pressure Drop of Duct+Pressure Drop of Air Outlet and Air Inlet".

If duct design is not appropriate, big sound and splash will occur.

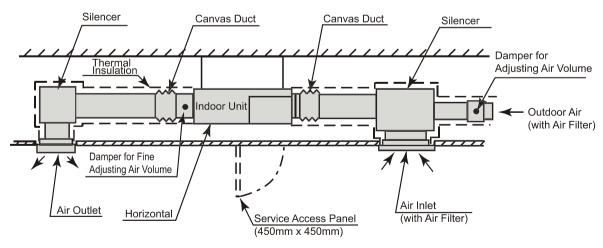

	Static Pressure(Pa)	
AVD-07~15HCFCL	AVD-19~24HCFCL	30
AVD-27~38HCFCL	AVD-48~54HCFCL	60
AVD-07~15HCFCH	AVD-19~24HCFCH	50(*)/80
AVD-27~38HCFCH	AVD-48~54HCFCH	120(*)/90

^{*:} Before Shipment

Fig. 4.8 Duct Connection

5. Refrigerant Piping Work

A DANGER

Use refrigerant R410A in the refrigerant cycle. Do not charge oxygen, acetylene or other flammable and poisonous gases into the refrigerant cycle when performing a leakage test or an air-tight test. These types of gases are extremely dangerous and can cause an explosion. It is recommended that compressed air, nitrogen or refrigerant be used for these types of tests.


- 5.1 Piping Materials
 - (1) Prepare locally-supplied copper pipes.
 - (2) Select clean copper tubes making sure there is no dust and moisture inside the tubes.

Before connecting pipes, blow the inside of the tubes with nitrogen or dry air, to remove any dust or foreign materials.

5.2 Piping Connection

ACAUTION

- Cap the end of the pipe when the pipe is to be inserted through a hole.
- Do not put pipes on the ground directly without a cap or vinyl tape at the end of the pipe.

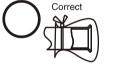




- An excess or a shortage of refrigerant is the main cause of trouble to the units.
 Charge the correct refrigerant quantity.
 - (1) Position of piping connection is shown below.

 Unit(mm)

07-24

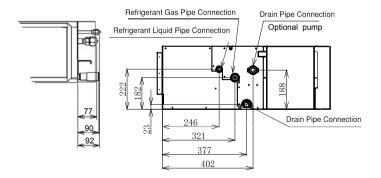

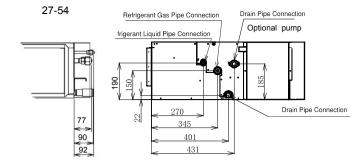


Fig. 5.1 Position of Piping Connection

NOTE


The position of the drain pipe connection is as shown in the above figure, and the lower connection hole shall be closed with the rubber plug.

mm (in.)

Model	Gas Piping	Liquid Piping
07 ~ 15	φ12.7 (1/2)	φ6.35 (1/4)
19	φ15.88 (5/8)	φ6.35 (1/4)
22 ~ 30	φ15.88 (5/8)	φ9.53 (3/8)
38 ~ 54	ф15.88 (5/8)	ф9.53 (3/8)

※ Flaring Dimension

Perform the flaring work as shown below.

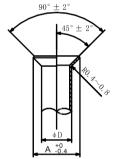

Diameter	A +0) .4		
фD	R410A	R407C		
6.35	9.1	9.0		
9.53	13.2	13.0		
12.7	16.6	16.2		
15.88	19.7	19.4		
19.05	(*)	23.3		

- (*)It is impossible to perform the flaring work with 1/2H material. In this case, use an accessory pipe(with a flare).
- (2) When tightening the flare nut, use two spanners as shown in Fig. 5.2.



Pipe Size	Tightening Torque (N.m)
φ6.35mm	20
φ9.53mm	40
φ15.88mm	80
φ19.05mm	100

Fig. 5.2 Tightening Work of Flare Nut

(3) After connecting the refrigerant piping, seal the refrigerant pipes by using the Field supplied insulation material as shown in Fig 5.3.

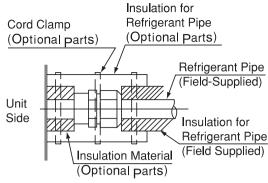



Fig. 5.3 Insulation on Pipes


(4) Evacuation and refrigerant charging procedures should be performed according to "Installation & Maintenance Manual" of the outdoor unit.

6. Drain Piping

- (1) The position of the drain piping connection is shown in Fig. 6.1.
- (2) Prepare polyvinyl chloride pipe with a 32mm outer diameter.
- (3) Fasten the tube to the drain hose with the adhesive agent and the field supplied clamp. The drain piping must be performed with a DOWN-SLOPE pitch of 1/25 to 1/100.
- (4) Insulate the drain pipe after connecting the drain hose.

Unit(mm)

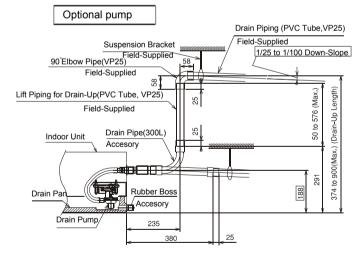

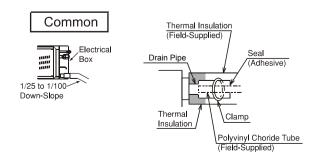

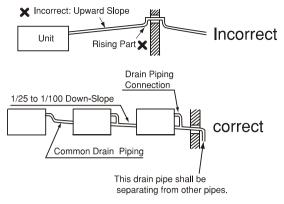


Fig. 6.1 Drain Piping

NOTE

When the relative humidity of inlet or ambient air exceeds 80%, apply an (field-supplied) auxiliary drain pan beneath the indoor unit as shown in Fig. 6.2.

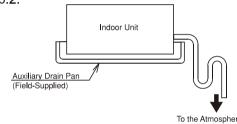


Fig. 6.2 Auxiliary Drain Pan

NOTE

- (1) Do not create an upper-slope or rise for the drain piping, since drain water can flow back to the unit and leakage to the room will occur when the unit operation is stopped.
- (2) Do not connect the drain pipe with sanitary or sewage piping or any other drainage piping.
- (3) When the common drain piping is connected with other indoor units, the connected position of each indoor unit must be higher than the common piping. The pipe size of the common drain pipe must be large enough according to the unit size and number of units.
- (4) After performing drain piping work and electrical wiring, check to ensure that water flows smoothly as in the following procedure. Checking with the Float Switch
 - a. Switch ON the power supply.
 - b. Pour 2 or 2.5 liters of water into the drain pan.
 - c. Check to ensure that the water flows smoothly or whether no water leakage occurs. When water cannot be found at the end of the drain piping, pour another 2 liters of water into the drain.

7. Electrical Wiring

AWARNING

- Turn OFF the main power switch to the indoor unit and the outdoor unit and wait for at least 3 minutes before electrical wiring work or a periodical check is performed.
- Check to ensure that the indoor and outdoor fans have stopped before electrical wiring or a periodical check.
- Protect the wires, drain pipe, electrical parts, etc. from rats or other small animals. If no protection is arranged, rats may gnaw at unprotected parts and at the worst, a fire will arise.
- Avoid the contact of wires with the refrigerant piping, sheet metal edges and electrical components in unit.
 Otherwise, the wire may be damaged or even cause fire.
- Use ELB with medium sensing rate (earth leakage breaker with action time being equal to 0.1 seconds or less). The failure to do so may result in electric shock or fire
- The wires must be firmly secured. External force applied to terminals may cause a fire.
- It is forbidden to connect a plurality of power lines into one power terminal block. At the indoor unit side of air conditioner, power wiring can be extended through a power distribution box. Be sure to calculate the wiring capacity carefully, since excessively low wiring capacity may frequently cause fire.
 - Do not start the system before all check points are thoroughly checked.

ACAUTION

- Wrap the accessory packing around the wires, and plug the wiring connection hole with the seal material to protect the product from any condensate or insects.
- Tightly secure the wires with the cord clamp inside the indoor unit.
- Secure the cable of wired control using the cord clamp inside the electric box.
- Tighten screws to the following torques.

M4: 1.0~1.3 N·m M5: 2.0~2.4 N·m M6: 4.0~5.0 N·m M8: 9.0~11.0 N·m M10: 18.0~23.0 N·m


7.1 General Check

- (1) Make sure that the field-selected electrical components (main power switches, circuit breakers, wires, conduit connectors and wire terminals) have been properly selected according to the electrical data given in "Technical Catalog I". Make sure that the components comply with National Electrical Code (NEC).
- (2) Check to ensure that the power supply voltage is within ±10% of the rated voltage.
- (3) Check the capacity of the electrical wires. If the power source capacity is too low, the system cannot be started due to the voltage drop.
- (4) Check to ensure that the ground wire is connected.
- (5) Power Source Main Switch Install a multi-pole main switch with a space of 3.5mm or more between each phase.

7.2 Electrical Wiring Connection

The electrical wiring connection for the indoor unit is shown in Fig. 7.1.

- Connect the cable of an optional remote control switch or an optional extension cable to the connectors on the printed circuit board inside the electrical box through the connecting hole in the cabinet.
- (2) Wrap the power cord (L and N) around the magnetic ring one time and fix it with a wire tie as part of the unit. Connect the power supply and earth wires to the terminals in the electrical box.
- (3) Connect the wires between the indoor unit and the outdoor unit to the terminals in the electrical box.
- (4) Tightly clamp the wires using the cord clamp inside the electrical box.

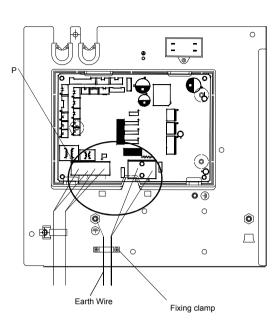

Enlarged View of P Part Terminal Block (TB) Wiring

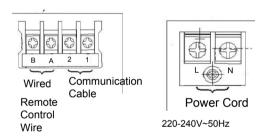


Fig. 7.1 Electrical Wiring Connection

7.3 Static Pressure Electrical Wiring Connection

AVD-07 ~ 24HCFCH	Static Pressure (Pa)	50(*)	80
	Printed	1	2
AVD-27~ 54HCFCH	Static Pressure (Pa)	120(*)	90
	Printed	1	2

^{*:} Before Shipment

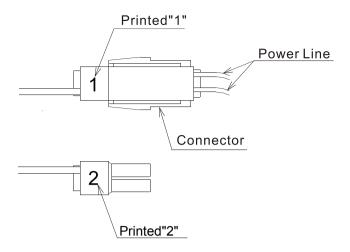


Fig.7.2 Static Pressure of Change

8. Test Run

Test run should be performed according to "Installation & Maintenance Manual" of the outdoor unit.

AWARNING

- Do not operate the system until all the check points have been cleared.
 - (A) Check to ensure that the electrical resistance is more than 1 megohm, by measuring the resistance between ground and the terminal of the electrical parts. If not, do not operate the system until the electrical leakage is found and repaired.
 - (B) Check to ensure that the stop valves of the outdoor unit are fully opened, and then start the system.
 - (C) Check to ensure that the switch on the main power source has been ON for more than 12 hours, to warm the compressor oil by the crankcase heater.
- Pay attention to the following items while the system is running.
 - (A) Do not touch any of the parts by hand at the discharge gas side, since the compressor chamber and the pipes at the discharge side are heated higher than 90°C.
 - (B) DO NOT PUSH THE BUTTON OF THE MAGNETIC SWITCH(ES). It will cause a serious accident.

9. Safety and Control Device Setting

Indoor Unit

Model			07	~ 54
For Evaporator I	an Motor		Class B	Class F
Thermostat	Cut-Out	°C	130 <u>+</u> 5	150±5
	Cut-In	°C	90±15	100±15
For Control Circu	For Control Circuit			
Fuse Capacity		Α		5
Freeze Protection	n			
Thermostat Cut-Out		°C	()
Cut-In		°C	1	4
Thermostat Differential		°C		2

10. Common

10.1 Field Minimum Wire Sizes for Power Source

AWARNING

- Use an ELB (Electric Leakage Breaker). If not used ,it will cause an electric shock or a fire.
- Run through the cables using conduit tube, and Completely seal the end of conduit tube with sealing materials.

Field Minimum Wire Sizes for Power Source

AVD-*HCFCH

<u> </u>	<u>псгсп</u>		
	Maximum	Power Source Cable Size	Transmtting Cable Size
Model	Current	EN60335-1	EN60335-1
	Current		
07~ 09	0.81A		
12~ 15	1.3A		
19~ 24	1.55A	0.52	
27 20	2.5A	2.5 m ²	0.75mm ²
27~ 38	2.5A		
48~ 54	3.5A		
10 04	J.JA		

AVD-*HCFCL

<u> </u>	<u> </u>		
	Maximum	Power Source Cable Size	Transmtting Cable Size
Model		EN60335-1	EN60335-1
	Current		
07~ 09	0.62A		
12~ 15	1.05A		
19~ 24	1.13A		
		2.5 m ²	0.75mm ²
27~ 38	2.14A		
48	2.58A		
54	2.68A		


NOTE

- (1) Field wiring shall be in conformity to local laws and regulations and be done by qualified professionals.
- (2) Please refer to relevant standards for the size of above-noted power cord.
- (3) Where power cord is connected through junction box in series, be sure to determine the total current and select electric wires based on the table below.
- (4) As a minimum, the chosen power cord shall be compliant with requirements on neoprene sheathed wire #57 as stated in IEC60245-1, while the power cord shall be made from copper conductor.
- (5) The wire specification for weak-current communication circuit shall not be lower than that for RVV(S)P shielded wires or equivalent, and the shielding layer shall be grounded.
- (6) All-pole disconnection switch with contact spacing no less than 3mm shall be applied between power supply and air conditioning unit.
- (7) In the case of damaged power cord, please contact your dealer or professionals from the designated maintenance department in time for servicing and/or replacement.
- (8) Power cord installation requires a longer ground wire than current-carrying wire.
- (9) The interconnecting wire between outdoor and indoor units shall be, as a minimum, H05RN-F according to the European standard EN60335-1.

According	According to EN60335-1			
Current(A)	Wire Size(mm²)			
i≤6	2.5			
6 <i≤ 10<="" td=""><td>2.5</td></i≤>	2.5			
10 <i≤ 16<="" td=""><td>2.5</td></i≤>	2.5			
16 <i≤ 25<="" td=""><td>4</td></i≤>	4			
25 <i≤ 32<="" td=""><td>6</td></i≤>	6			
32 <i≤ 40<="" td=""><td>10</td></i≤>	10			
40 <i≤ 63<="" td=""><td>16</td></i≤>	16			
63 <i< td=""><td>※1</td></i<>	※1			

X1: DO NOT connect wires in series when the current exceeds 63A.

- (1) DIP switch must be set with power sources of the indoor and outdoor units in OFF state. Otherwise, the settings are invalid.
- (2) The location of DIP switch is shown in the figure below.

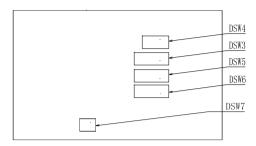

- (3) The PCB of indoor unit is furnished 5DIP switches that must be set based on the following requirements before test run. The system must not be started before the completion of DIP setup.
- (a) All indoor units must be numbered (DSW6) as shown in the figure below. The outdoor unit numbering must start with "0".

DSW6(Setting 0~63)	Ex.)Set machine No.16
1 2 3 4 5 6 OFF	1 2 3 4 5 6 OFF No.5 ON

DSW6 are set to "0" before delivery. 64 indoor units can be connected.

(b) Capacity Code Setting (DSW3)No setup is required.The code is set before delivery. This switch is used to set the capacity of indoor unit.

Capacity	07	09	12	15	19	22
Setting Position	ON 1 2 3 4 5 6 OFF	ON 1 2 3 4 5 6 OFF	ON 1 2 3 4 5 6 OFF	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6 OFF
Capacity	24	27	30	38	48	54
Setting Position	ON 1 2 3 4 5 6	ON 1 2 3 4 5 6 OFF	ON 1 2 3 4 5 6 OFF	ON 1 2 3 4 5 6 OFF	ON 1 2 3 4 5 6 OFF	ON 1 2 3 4 5 6 OFF

(c) Model Code Setting (DSW4) No setup is required. The code is set before delivery. Default No.1 and 4 ON.



(d) Cooling System Code No. Setting (DSW5)The setup is needed. All are set to OFF before delivery.

Refrigerant System Setting

DSW5(Setting 0~63)	Ex.) Set system No. 5		
0N 1 2 3 4 5 6 0FF	DSW5 0N 1 2 3 4 5 6 0FF		

DSW5 are set to "0" before delivery. 64 indoor units can be connected.

- (e) Safety Reset (DSW7)
 - * Factory setting.



* Once strong current is accidentally connected to Terminals 1 and 2 of TB2, the PCB fuse will be blown. Then, it's necessary to correct the wiring and then set switch No. 1 to ON.



Note:

Symbol "•" indicates the location of DIP switch. The position indicated in the diagram is in the factory-set state.



The power supply shall be turned off before the setup of DIP switch. Otherwise, the settings will be invalid.



1115175

Qingdao Hisense Hitachi Air-conditioning Systems Co., Ltd.

Add: 218, Qianwangang Road, Economic & Technical Development Zone, Qingdao, P.R. China

http://www.hisense-vrf.com E-mail:export@hisensehitachi.com